

HEIGHT-ADJUSTABLE TABLE FRAME.



ASSEMBLY AND OPERATION MANUAL.

UK

Important notes

Prior to installment, use and maintenance of the table frame, you any installer and any user of the table must study this assembly and operation manual carefully, so as to gain a complete understanding of its contents.

Use of the table: The electromotive, height-adjustable table frames are designed for workstations in dry, industrial work environments only. The table height is infinitely adjustable, so that it can be set to the most ergonomically suitable working level.

They have not been designed for other purposes than those included in this manual, e.g. they are not to be used in areas of high humidity or dampness, nor for lifting people. **Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame. Such activities may result in serious bodily injury.**


Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.






WARNING



WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

Technical data

	HV1045-175	HV1045-250	HV1045-350
H	63-120 cm		
D	73 cm	73 cm	60 cm
B	116/156/196 cm	116/156/196 cm	116/156 cm
F _{MAX}	 175 kg	250 kg	350 kg
V	~18mm/sec		
Main power connection:	200-240 VAC / ~50Hz 100 Watt		

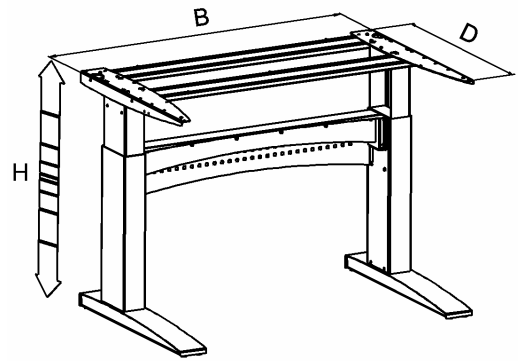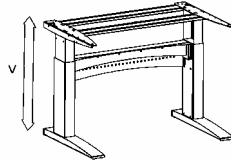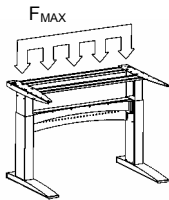




Actuation device

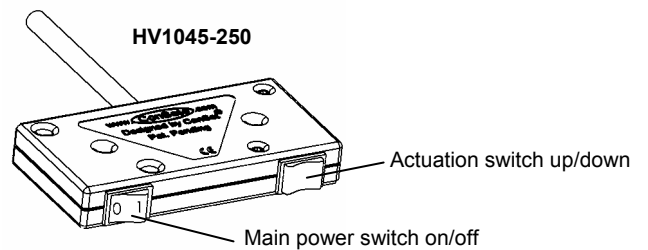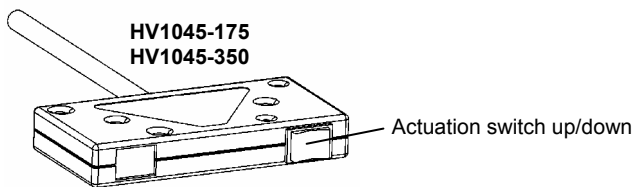

Care

The table frame requires no maintenance. In the event of the occurrence of jarring sounds during operation, STOP using the table and please contact the dealer.


Packing list

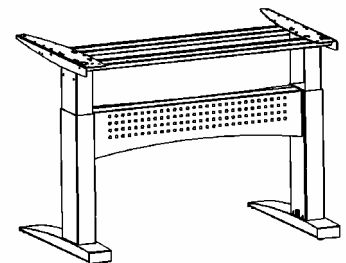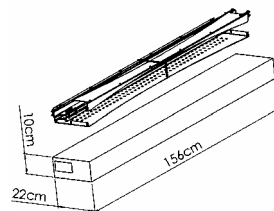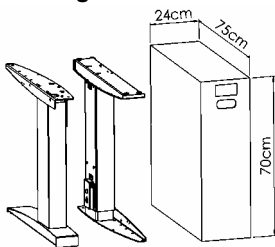

HV1045-175
HV1045-250
HV1045-350

HV1030 (116cm)
HV1041 (156cm)
HV1042 (196cm)


Item list

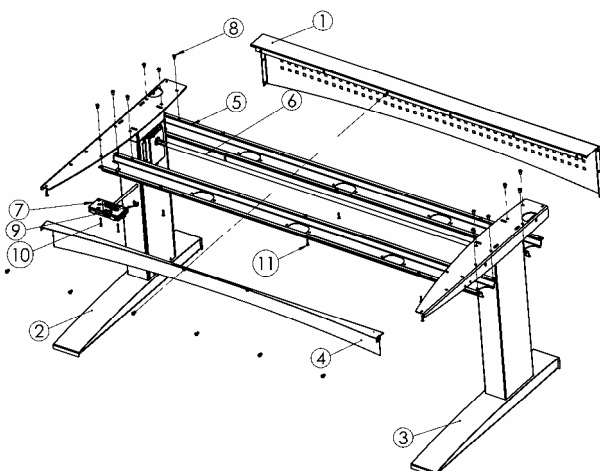


Item.no.	Description
1	Lower travers, base
2	Frame left
3	Frame right
4	Lower travers, cover
5	Upper travers
6	Carrier tube
7	User panel
8	Screw
9	Wirenail
10	Panel screw
11	Screw, tabletop

Installation

1.

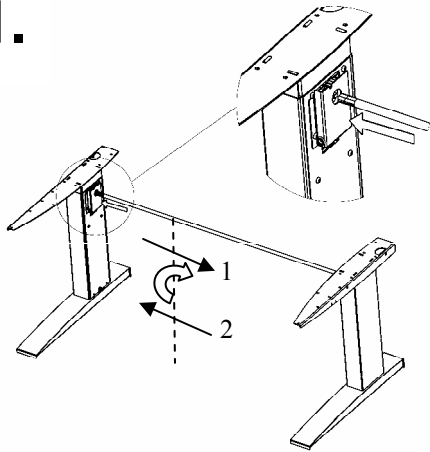


2.

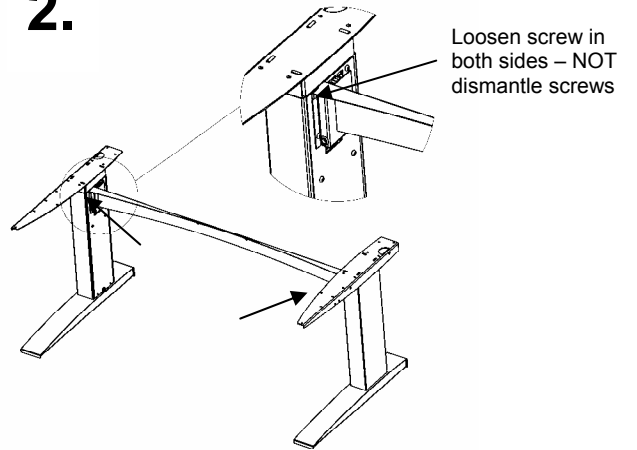


3.



Loosen 2 screws in both sides – NOT dismantle screws

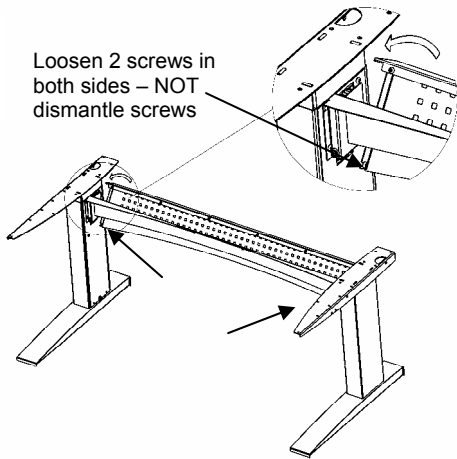



4.

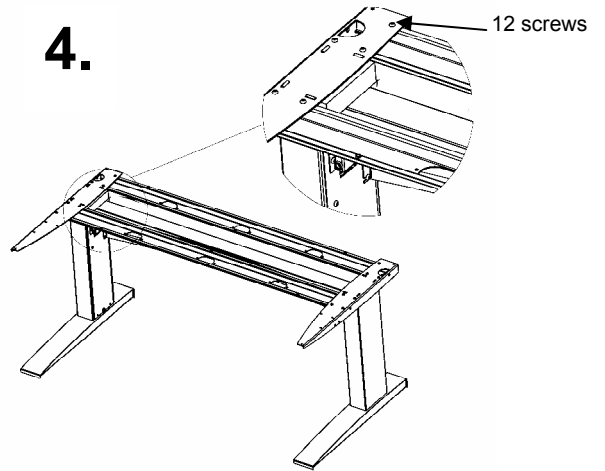

5a.

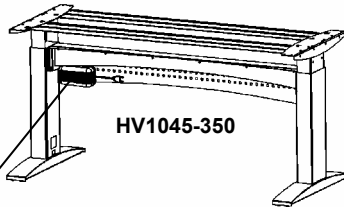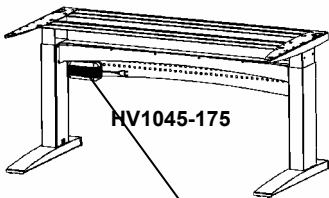


5b.

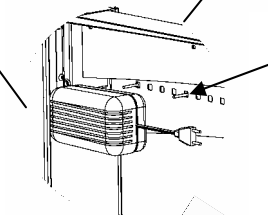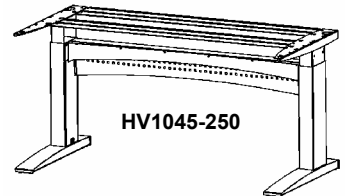

Wires are assembled color to color.

6.

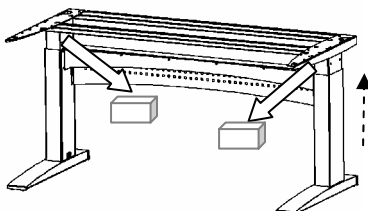

	<p>Due to the danger of high voltage, do not cut or bend the cord!</p>
<p>Ensure that all screws are securely tightened!</p>	
<p>FAILURE TO FOLLOW THESE PRECAUTIONS MAY RESULT IN SERIOUS BODILY INJURY.</p>	

Declaration of conformity

We hereby declare, under our sole responsibility that the following products:

- Ergomat sit and stand tables product type 501-11

which are covered by this statement, are in conformity with the following standards and other normative documents:

- Counsel Directive 98/37/EF
- Counsel Directive 89/336/EØF with later changes
- Counsel Directive 73/23/EØF with later changes

With reference to the Machinery Directive (98/37/EF) please be aware:

- the sit and stand table is considered a machine and
- the sit and stand table may not be used until it has been assembled and installed according to the instructions.

Dealers:

To locate the nearest dealer please call: +45 70221840 or e-mail: info@ergomat.dk

DISTRIBUTION WORLD-WIDE:

ERGOMAT A/S
Sunekær 13-15
DK-5471 Søndersø
DENMARK

Info@ergomat.dk
www.ergomat.com